# Revolution SDK Wii Balance Board Accessory Programming Manual

Version 1.7a

The content of this document is highly confidential and should be handled accordingly.

#### Confidential

These coded instructions, statements, and computer programs contain proprietary information of Nintendo and/or its licensed developers and are protected by national and international copyright laws. They may not be disclosed to third parties or copied or duplicated in any form, in whole or in part, without the prior written consent of Nintendo.

#### **Table of Contents**

1	Overview		7
2	Wii Balan	ce Board Accessory	7
2.	.1 Balaı	nce Sensors	7
2.	.2 Pairi	ng	7
2.	.3 Regi	ons and Load Values	9
2.	4 Sales	s Format	9
3	Basic Pro	gramming	10
3.	.1 Sam	ple Program: simple_wbc.c	11
3.	.2 [Japa	an Only] Sharing Normal Pairing Information	16
3.	.3 Load	ling Calibration Data	17
3.	4 Get I	Balance Sensor Output Values	17
3.	.5 Zero	Point Setting	18
3.	.6 Conv	version to Load Values	18
3.	7 Corre	ections	19
4	Measuring	g Load Accurately	20
4.	.1 Balaı	nce Sensor Properties	20
4.	.2 Nece	essity of Temperature Correction and Gravitational Acceleration Correction	20
4.	.3 Drifti	ng of the Zero Point Setting	20
4.	4 Fluct	uations During Measurements	21
4.	.5 Reco	ommended Measurement Procedure	21
5	Wii Balan	ce Board Operations Check	22
6	Battery Le	evel	24
6.	.1 Batte	ery Level	24
6.	.2 Mess	sage Display Conditions for Battery Replacement	24
<b>^</b> -	al a		
Co	de		
	Code 3-1	simple_wbc.c	11
Tal	bles		
	Table 2-1	Maximum Weight	9
	Table 3-1	Basic Functions	
	Table 4-1	Determining Fluctuations	21

3

# **Figures**

Figure 2-1	Wii Balance Board Accessory Can Be Normal-Paired with Only One Wii Console	8
Figure 2-2	Normal-Pairing with Another Wii Console Overwrites the Wii Balance Board Accessory's	;
Settings		8
Figure 3-1	Library Organization	10
Figure 3-2	Wii Balance Board Accessory Connection Flow	15
Figure 3-3	Main Flow	15
Figure 3-4	Correspondence Between Wii Balance Board Accessory's Press Values and Each Foot	17
Figure 5-1	Recommended Wii Balance Board Operations Check Flow	23

## **Revision History**

Version	Revision Date	Description
1.7a	2010/09/29	Corrected error in Figure 5-1.
1.7	2010/06/17	In section 4.4 Fluctuations During Measurements, revised the determination for whether measurements were fluctuating, from ±0.3 kg to determination criteria based on the measurer's weight.
1.6	2010/04/21	In Chapter 5, in Step 2 of the Wii Balance Board Operations Check procedure, revised description to determine whether the user has stepped off the Wii Balance Board to the recommended method of having the user pressing a button and then reading the WBCRead function return value.
		In Figure 5-1 Recommended Wii Balance Board Operations Check Flow, revised determination that the user has stepped off the Wii Balance Board.
1.5	2009/11/02	Standardized the battery replacement message to WBCM_02 of the Wii Message List in Figure 5-1.
1.4	2009/06/23	In step 4 of the Wii Balance Board Operation Check Mode in Section 5, changed the text to indicate that when there is a user timeout, the process returns to the zero point setting, rather than to a point after completion of the zero point setting.
		Revised Figure 5-1 so that the process returns to setting the zero point again when there is a user timeout.
		Deleted mention of "120 samples" from the text in 3.1.
1.3	2009/05/01	Revised Wii Balance Board operations check procedure.
	2009/02/06	Changed "Troubleshooting Mode" to "Wii Balance Board Operations Check."
		In section 2.3, changed "the maximum load value that can be handled in a game' to "maximum weight that is displayed on-screen during a game." Added explanation about where to check for maximum loads.
		To section 3.3, added description of the process when loading calibration data fails and the display of an error message. Added how to handle the situation when the WBCSetupCalibration function is FALSE.
		Added to section 4.3 reference information (inspection standards for shipping) regarding drifting of the zero point for Wii Balance Board.
		Newly added section 4.4 Fluctuations during Measurements.
		Made corrections because unintended hyperlink data was created in function names.
		Changed the copyright dates to 2008–2009.
		Added a note to section 3.5 regarding the use of the WBCRead function.
		In Chapter 5, changed the method to determine whether a person has stepped off.
		Changed Table 2-1 in section 2.3 to "Maximum Weight." Revised the guideline reference.
1.2	2008/10/28	Corrected Figure 5-1.
	2008/09/09	Added to Chapter 5 that the troubleshooting mode was implemented as a separate mode.
		Added section 6.2.

Version	Revision Date	Description
		Added information related to retrying the loading of calibration data to section 3.3.  Changed the notation for the WBCGetTGCWeight and WBCSetupCalibration functions in section 3.1.  Changed the notation for the WBCGetTGCWeight function in section 3.7.
1.1	2008/04/02	<ul> <li>Section 2.2 Pairing: Added a precaution about games that support four players.</li> <li>Section 2.3 Regions and Load Values: <ul> <li>Explained that in Japan, if the load exceeds 136 kg, usage is permitted up to 150 kg as long as the load is not displayed.</li> <li>Added a precaution about minimum loads.</li> </ul> </li> <li>Chapter 5 Wii Balance Board Operations Check <ul> <li>Noted that all four corners have to be checked.</li> <li>Deleted "Troubleshooting Mode Screen."</li> </ul> </li> <li>Added Figure 5-1 Recommended Wii Balance Board Operations Check Flow and changed the troubleshooting procedures to match.</li> </ul> <li>Deleted section 6.2.</li>
1.0	2008/02/26	Initial version.

#### 1 Overview

This document provides information required to develop software for the Wii Balance Board accessory.

# 2 Wii Balance Board Accessory

#### 2.1 Balance Sensors

Four legs are attached to the bottom of the Wii Balance Board accessory. A sensor, called the *balance sensor*, used to measure load, is attached to each of these legs. When a load is applied, a value proportional to that load is returned. The greater the load, the greater this value. Although detailed information about balance sensors is provided in section 3.4 Get Balance Sensor Output Values, be aware that this value itself has no meaning. It is the amount of change in this value that has meaning. In this context, the *amount of change* refers to the amount of change compared to the state when nothing is on the Wii Balance Board accessory (the *no-load state*). A method called *zero point setting* (see section 3.5 Zero Point Setting) is required to recognize this no-load state.

The balance of a person (or object) on the Wii Balance Board accessory is be determined by observing the amount of change across the four balance sensors. The load, then, is the total value of the amount of change at the four balance sensors.

The Wii Balance Board accessory and Wii console can communicate only via a wireless connection. Although wireless communication is carried out at a rate of 200 samples per second (just as with the Wii Remote controller), balance sensor values change at a rate of 60 samples per second.

#### 2.2 Pairing

To use the Wii Balance Board accessory, it is first necessary to perform normal pairing with the Wii console by simultaneously pressing the SYNC buttons on both devices. Pairing succeeds when an application that supports the Wii Balance Board accessory is running. Note that pairing from the Wii Menu is impossible because it does not support the Wii Balance Board accessory.

Also note that the Wii Balance Board accessory can be normal-paired with only one Wii console.

After normal pairing succeeds, both connected devices carry the other's device information, and communications between them becomes possible. The Wii Balance Board accessory can carry the information for only one Wii console. Similarly, the Wii console can carry the device information for only one Wii Balance Board accessory.

Wii Console A

Device information for Wii Console A


Communications enabled

Communications enabled

Figure 2-1 Wii Balance Board Accessory Can Be Normal-Paired with Only One Wii Console

If a Wii Balance Board accessory that has already been normal-paired is normal-paired with another Wii console, the Wii Balance Board accessory's settings will be overwritten (see Figure 2-2). To use it with the original Wii console, normal-pairing must be repeated.

Figure 2-2 Normal-Pairing with Another Wii Console Overwrites the Wii Balance Board Accessory's Settings

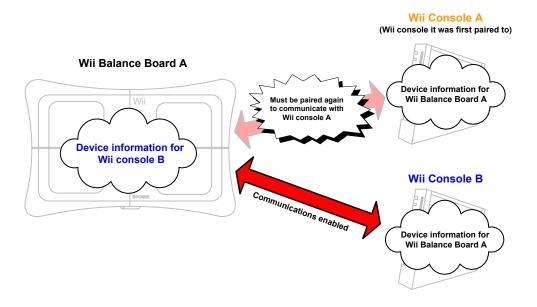

The Wii Balance Board accessory always connects as Player 4 and is handled in the same manner as the Wii Remote controller. Therefore, up to three Wii Remote controllers can be used along with the Wii Balance Board accessory. This means, for example, that if four Wii Remote controllers are being used in a game that supports up to four players, and part way through the game a Wii Balance Board accessory is used, Player 4's Wii Remote controller will become unusable, even though it was used normally up to that point. Because this may confuse the user, be sure to implement some measure, such as displaying a cautionary message, that is appropriate for each game.

#### 2.3 Regions and Load Values

The Wii Balance Board accessory is not market-specific. The same accessory is used throughout the world. However, the maximum weight displayed on-screen during a game does differ depending on the region. Maximum load values are shown in Table 2-1.

**Table 2-1 Maximum Weight** 

Japan	America and Europe
Up to 136 kg (300 lbs)	Up to 150 kg (330 lbs)

Because games intended for sale in Japan must observe the Measurement Law, the numeric load values displayed on the screen cannot have an accuracy greater than that detailed in the "Weight Display" specification listed in the *Wii Balance Board Accessory Operations Manual*. However, even if a user exceeds this weight limit, if the weight is not displayed on the screen, the accessory can be used as long as the load limit (150 kg) is not exceeded. We recommend checking maximum loads in each game mode. For more details, see section 15.2 Load Restrictions [Required] in the *Wii Balance Board Programming Guidelines*. Set the minimum load to 0 kilograms; do not create a recommended minimum load value that is greater than zero.

#### 2.4 Sales Format

As of February 2008, the Wii Balance Board accessory is sold packaged with the Wii Fit video game. There are no plans to sell the Wii Balance Board accessory alone. Therefore, you must consult with Nintendo when considering an application controlled using only the Wii Balance Board accessory.


# 3 Basic Programming

This chapter describes basic programming used to control the Wii Balance Board accessory.

The Wii Balance Board accessory uses two libraries: the WPAD and the WBC. The WPAD library allows direct access to hardware, and its <code>WPADRead</code> function is called to get raw output values from the balance sensors.

The WBC library is used to convert values obtained by WPADRead into load values, in kilogram units. Therefore, it is positioned as a higher order library than the WPAD library. Because some functions must be directly controlled from the WPAD library, the library organization associated with the Wii Balance Board accessory is as shown in Figure 3-1.

Figure 3-1 Library Organization

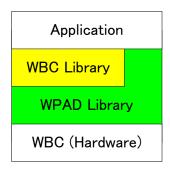

Basic library functions are provided below.

Table 3-1 Basic Functions

Function	Purpose	
WPADRead	Gets balance sensor output values.	
WPADControlBLC	Issues various control commands to the Wii Balance Board accessory.	
WPADRegisterBLCWorkarea	Configures the work buffers for the library required by the process for sharing registration information for Wii Fit for Japan and the Wii Balance Board accessory.	
WPADIsRegisteredBLC	Checks whether the Wii Balance Board accessory is paired with the Wii console.	
WBCSetZEROPoint	Sets the zero point.	
WBCRead	Converts balance sensor output values to load values, in kilograms.	
WBCGetTGCWeight	Corrects temperature and gravitational acceleration.	
WBCSetupCalibration	Loads calibration data*.	
WBCGetCalibrationStatus	Gets the status of loaded calibration data.	

The following section describes simple program code using the basic functions listed above.

RVL-06-0345-001-I 10 © 2008-2010 Nintendo Released: October 5, 2010 CONFIDENTIAL

Data called *calibration data* is stored internally on the Wii Balance Board accessory. This data is used to convert balance sensor output to weight values in kilogram units and is unique to each individual Wii Balance Board accessory. For details, see section 3.3 Loading Calibration Data.

#### 3.1 Sample Program: simple\_wbc.c

#### Code 3-1 simple wbc.c

```
1: static void ZeroSetStart2( s32 chan, s32 result )
2: {
3:
      #pragma unused(chan, result)
4:
5:
      // Wait about 200[ms] so that Board's press value rarely becomes unstable
6:
      // after updating Balance Wii Board's temperature.
7:
      WaitMilliTime(200);
8:
      // Set Zero point.
10:
      zero[0] = status.press[0]; //Normally, set the average for 2 seconds.
11:
       zero[1] = status.press[1]; //Normally, set the average for 2 seconds.
       zero[2] = status.press[2]; //Normally, set the average for 2 seconds.
12:
       zero[3] = status.press[3]; //Normally, set the average for 2 seconds.
       WBCSetZEROPoint( zero, (u32) (sizeof(zero) / sizeof(zero[0])));
14:
15: }
16:
17:
18: static void ZeroSetStart( s32 chan, s32 result )
20:
       #pragma unused(chan, result)
21:
22:
       // Check Board's temperature.
23:
       WPADRead(WPAD CHAN3, &status);
24:
25:
26:
       if((status.temp == 127) || (status.temp == -128))
27:
28:
          // Update Board's temperature again if you cannot get correct temperature.
29:
          WPADControlBLC(WPAD_CHAN3, WPAD_BLCMD_UPDATE_TEMP, ZeroSetStart2);
30:
31:
       else
32:
33:
          // Wait about 200[ms] so that Board's press value rarely becomes unstable
34:
          // after updating Balance Wii Board's temperature.
35:
          WaitMilliTime(200);
36:
37:
          // Set Zero point.
          zero[0] = status.press[0]; //Normally, set the average for 2 seconds.
38:
39:
          zero[1] = status.press[1]; //Normally, set the average for 2 seconds.
           zero[2] = status.press[2]; //Normally, set the average for 2 seconds.
```

```
41:
           zero[3] = status.press[3]; //Normally, set the average for 2 seconds.
42:
          WBCSetZEROPoint( zero, (u32) (sizeof(zero) / sizeof(zero[0])));
43:
44: }
45:
46:
47: int main( void )
48: {
49:
       double weight[WPAD PRESS UNITS];
50:
       u32 type;
51:
52:
       DEMOInit ( NULL );
53:
       DEMOPadInit();
54:
55:
       // If Japan, need to call WPADRegisterBLCWorkarea to set a work buffer.
56:
       // If not Japan, WPADRegisterBLCWorkarea does nothing.
57:
       WPADRegisterBLCWorkarea( workarea );
58:
59:
       WPADRegisterAllocator(myAlloc, myFree);
60:
       WPADInit();
61:
       WPADSetConnectCallback(WPAD CHAN3, connectCallback);
62:
       while (WPAD STATE SETUP != WPADGetStatus())
63:
64:
65:
66:
67:
68:
       // You can deallocate the work buffer once initialization of WPAD library has completed.
69:
       // This sample program does nothing so it uses a static buffer.
70:
71:
       while(1)
72:
73:
          DEMOPadRead();
74:
75:
          if (DEMOPadGetButtonDown(0) & PAD BUTTON A)
76:
77:
              // Update the Board's temperature before zero point correction.
              WPADControlBLC(WPAD CHAN3, WPAD BLCMD UPDATE TEMP, ZeroSetStart);
78:
79:
           }
80:
81:
           if (WPADProbe(WPAD CHAN3, &type) == WPAD ERR NO CONTROLLER)
82:
```

```
83:
              if (WPADIsRegisteredBLC())
84:
85:
                 OSReport("WBC is not connected.\n");
86:
87:
              else
88:
              {
89:
                 OSReport("WBC is not registered. Please register WBC with SYNC button.\n");
90:
91:
92:
          else
93:
94:
              if (type == WPAD DEV BALANCE CHECKER)
95:
              {
                 WPADRead(WPAD_CHAN3, &status);
96:
97:
                 if(WBCGetCalibrationStatus() == TRUE)
98:
99:
100:
                     double total;
101:
                     double tgc weight;
102:
                     WBCRead(&status, weight, (u32)(sizeof(weight) / sizeof(weight[0])));
103:
104:
                     total = (double) (weight[0]+weight[1]+weight[2]+weight[3]);
105:
                     // Show Total weight. Normally, "total" is the average for 2 seconds.
106:
107:
                     if(WBCGetTGCWeight(total, &status, &tgc_weight) == WBC_ERR_NONE)
108:
109:
                        OSReport("%3.1f[kg]\n",tgc weight);
110:
111:
112:
                 else
113:
                 {
114:
                     OSReport("Calibration data read error. Please reconnect WBC.\n");
115:
116:
117:
              else
118:
119:
                 OSReport("No WBC is attached.\n");
120:
121:
122: }
123:}
124:
```

```
125:
126:static void connectCallback(s32 chan, s32 reason)
127:{
128:
      u32 type;
129:
130: if (reason == WPAD ERR NONE)
131:
132:
          // Disconnect 4P if 4P is not Wii Balance Board.
133:
          // Because 4P is reserved for Wii Balance Board.
134:
          WPADProbe(chan, &type);
135:
         if (chan == WPAD CHAN3 && type != WPAD DEV BALANCE CHECKER)
136:
137:
             OSReport("Channel%d is reserved for the balance checker.\n", chan);
138:
             WPADDisconnect (chan);
139:
         }
140:
         else
141:
         {
142:
             // Read the calibration value for calculating a weight.
143:
             if(WBCSetupCalibration())
144:
145:
                 OSHalt("WBC FATAL ERROR!!\n");
146:
             OSReport("Channel%d is connected.\n", chan);
147:
148:
             WPADSetExtensionCallback(chan, extensionCallback);
149:
150: }
151: else
152:
153:
         OSReport("Channel%d is disconnected.\n", chan);
154:
155:}
156:
157:
158:static void extensionCallback(s32 chan, s32 result)
159:{
160:
     switch(result)
161:
162:
          case WPAD DEV BALANCE CHECKER:
163:
              WPADControlDpd(chan, WPAD DPD OFF, NULL);
164:
              WPADSetDataFormat(chan, WPAD_FMT_BALANCE_CHECKER);
165:
              WPADControlBLC(chan, WPAD BLCMD ON, NULL);
166:
              OSReport("WBC initialized on channel%d.\n", chan);
```

```
167: break;
168: }
169:}
```

The processing of this program can be largely divided into two control flows, as shown in Figure 3-2 below. Note that the flow shown is intended to show those processes required for the Wii Balance Board accessory in an easy-to-understand manner and does not include all of the control flow in the code.

Figure 3-2 illustrates the process executed inside the function registered as the connection callback. This flow occurs when the Wii Balance Board accessory is connected (or disconnected). Figure 3-3 illustrates the main flow.

Figure 3-2 Wii Balance Board Accessory Connection Flow


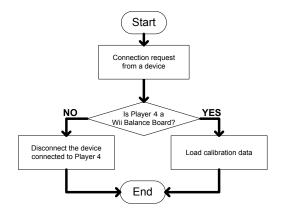


Figure 3-3 Main Flow

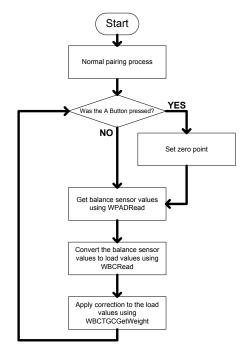

15

Parts of the program code are detailed below.

**Lines 1 to 44:** The zero point setting is made here. Although details on setting the zero point are provided in section 3.5, in simple terms, this process registers the state when nothing is on the Wii Balance Board accessory with the WBC library. The load value at this time is set as the zero point.

Although raw balance sensor output values in the sample code are input for ease of understanding, be sure to obtain balance sensor output values for 2 seconds and set the average of those values as the zero point. (For sample code that uses an average value over 2 seconds, see build/demos/wbcdemo/src/handling\_weight.c.)

**Lines 57 to 59:** This process is used to share pairing information with games that support the Wii Balance Board accessory. This process must be executed before calling the WPADInit function (or KPADInit function).

**Line 96:** This line gets balance sensor output values.

Line 103: This line converts balance sensor output values to load values in kg units.

Line 107: This line applies a correction to the load value. For ease of understanding, the total of the values converted to load values in kg units is input unchanged in the sample code. When displaying a load value on the game screen, display the value after obtaining values for a period of 2 seconds and applying correction to the average of those values. (For sample code that uses an average value over 2 seconds, see build/demos/wbcdemo/src/handling weight.c.)

Lines 126 to 155: These lines represent the function registered as the connection callback. This part of the code is executed whenever the Wii Balance Board accessory is connected (or disconnected). See Figure 3-2 for the process flow. If the device connected to Player 4 is the Wii Balance Board accessory, calibration data is loaded. If the device is not a Wii Balance Board accessory, the device connected to Player 4 is disconnected. Note that a disconnection process is not executed by the library, even though the Wii Balance Board accessory must be connected to Player 4.

**Lines 158 to 169:** These are the functions registered as the extension connection callback. Here, the WPAD data format setting is set to the data format for the Wii Balance Board accessory.

#### 3.2 [Japan Only] Sharing Normal Pairing Information

Applications intended for Japan must call the wpadregisterBlcWorkarea function before calling the wpadrnit function or kpadrnit function. This function executes a process for sharing pairing information of the Wii Balance Board accessory between applications that support the board. The buffer passed to this function must be 32-byte aligned and have a size of at least that given by wpad\_blcint\_work\_len. This buffer can be freed once the wpadgetStatus function returns wpad state setup.

Applications intended for regions other than Japan do not need to call the WPADRegisterBLCWorkarea function. (However, there is no problem if it is called.)

The WPADIsRegisteredBLC function is used to verify that a balance board is already paired.

#### 3.3 Loading Calibration Data

Calibration data specific to each Wii Balance Board accessory is stored internally by the board. This calibration data is used to convert press values to load values in kilogram units. When the WBCSetupCalibration function is called, calibration data is loaded, and a formula for conversion to load values in kilogram units is created within the WBC library. Always execute this function after the Wii Balance Board accessory has been paired.

After this function has been executed, the WBCRead, WBCSetZEROPoint, and WBCGetTGCWeight functions can all be used. (Only the WBCGetBatteryLevel function can be used without executing the WBCSetupCalibration function beforehand.)

Although the control returns soon after the WBCSetupCalibration function executes, the actual process completes after a short while (approximately 650 ms). Use the WBCGetCalibrationStatus function to check whether this function has completed normally; if it has not completed normally after more than 1 second has passed, or if the WBCSetupCalibration function returns a FALSE value, execute the WBCSetupCalibration function again. If it fails three consecutive times, decide that a malfunction has occurred and display to the screen a message such as "The Wii Balance Board has malfunctioned. Please read the Wii Balance Board user's manual for further information." For software that supports the Wii Balance Board, we recommend, after displaying an error message, providing some operation method as an alternative to the Wii Balance Board and returning directly to the game.

#### 3.4 Get Balance Sensor Output Values

Balance sensor output values are obtained using the WPADRead function. WPADBLStatus is a WBC-specific structure; it is specified to WPADRead and it stores the press member variables. The press array is a four-element array used to store balance sensor output values. Figure 3-4 shows the correspondence between each foot of the Wii Balance Board accessory and the order of press values in the array.

FRONT LEFT FRONT RIGHT

press[2] press[0]

Wil Prower

BACK LEFT BACK RIGHT

press[3] press[1]

Figure 3-4 Correspondence Between Wii Balance Board Accessory's Press Values and Each Foot

Observation of press values shows that each value varies significantly from others. For example, the number of digits and their values do not match at all, such as in a case where press[0]=1000, press[1]=25000, press[2]=3700, and press[3]=11000. Press values also differ completely

depending on the individual Wii Balance Board accessory being used. <u>Therefore, programs that use</u> the absolute value of press values are completely meaningless.

The meaning of press values is in the amount of change. In this context, the *amount of change* is from the zero point setting. The zero point setting is described in the next section.

#### 3.5 Zero Point Setting

In the WBC library the zero point setting sets the state where nothing is on the Wii Balance Board accessory. The zero point setting must be set every time before you measure a load. For details on the importance of making the zero point setting every time, see section 4.1 Balance Sensor Properties.

The zero point setting is determined with the following function:

```
s32 WBCSetZEROPoint(double press_ave[], u32 size);
```

The 2-second average for each press value obtained by the WPADRead function is set in the press\_ave argument. Be sure to set this argument in the same order as the press values, for example, by assigning the average of status.press[1] to press\_ave[1]. Set size to the number of elements in the press\_ave array. (Normally allocate four values.)

Before sampling the 2-second average for each press value, use the temperature update command (WPADControlBLC function) to update temperature information for the Wii Balance Board accessory. After updating the temperature, use the WPADread function to check whether the temperature was updated correctly.

A value of -128 or 127 is occasionally returned for temperature. If this happens, execute the temperature update command (WPADControlBLC function) again.

Wii Balance Board press values occasionally fluctuate for a short while after the update command is sent. Therefore, be sure to obtain press values after waiting a short while (approximately 200 ms) after issuing the temperature update command.

To determine if anything is on the Wii Balance Board accessory when setting the zero point, check the WBCRead function's return value. This return value functions effectively only when the Wii Balance Board is not damaged. For this reason, do not use this return value to check Wii Balance Board operations.

#### 3.6 Conversion to Load Values

The WBCRead function converts raw values into load values in kilogram units.

```
s32 WBCRead(WPADBLStatus *status, double weight[], u32 size);
```

The WPADBLStatus structure, which is obtained by WPADRead, is set as an argument. The converted load values are stored in weight in the same array order as the press values. Set size to the number of elements in the weight array (normally allocated for four values).

#### 3.7 Corrections

The WBCGetTGCWeight function corrects for both temperature and gravitational acceleration.

```
s32 WBCGetTGCWeight(double total weight ave, double *tgc weight, WPADBLStatus *status);
```

The 2-second average for the totals of the four load values obtained using the <code>wbcRead</code> function is set in the <code>total\_weight\_ave</code> argument. The value after correction is stored in the <code>tgc\_weight</code> argument. Always apply correction if you are going to use the load value. For more information on the importance of correcting for temperature and gravitational acceleration, see section 4.2 Necessity of Temperature Correction and Gravitational Acceleration Correction.

# 4 Measuring Load Accurately

#### 4.1 Balance Sensor Properties

Balance sensors exhibit "hysteresis" characteristics wherein, once load is applied, measured values do not completely return to their original state even if that load is reduced. For example, assume the zero point is set, and then a person (or object) steps on the Wii Balance Board accessory and then steps off. The status of the Wii Balance Board accessory after the load is removed is not exactly the same as when the zero point was originally set.

The status when no load is applied to balance sensors constantly varies each time a person (or object) steps on the board. Therefore, to ensure accuracy, **you must set the zero point each time before taking measurements.** 

# 4.2 Necessity of Temperature Correction and Gravitational Acceleration Correction

Balance sensors are metallic (aluminum). Metals can be deformed more easily, or less easily, depending on the temperature. Specifically, metals are more easily deformed at higher temperatures and less easily at lower ones. When the metal deforms more easily, it causes load values to be slightly larger, and when the metal deforms less easily, it causes load values to be slightly smaller.

Weight varies in proportion to gravity. It is therefore necessary to consider gravitational acceleration when dealing with load values. Gravitational acceleration varies slightly due to latitude. Specifically, gravitational acceleration is smaller at zero latitude (on the equator) because centrifugal force due to the Earth's own rotation is greatest there. As a result, load values at the equator are smaller, while load values at the North and South Poles are greater.

The WBCGetTGCWeight function performs both temperature correction and gravitational acceleration correction. To ensure accurate measurements, always use the WBCGetTGCWeight function to correct load values.

#### 4.3 Drifting of the Zero Point Setting

Output from the balance sensors varies due to factors such as the time elapsed since the Wii Balance Board accessory was turned on. The zero point can drift if it is not updated, even if no load was placed on or removed from the accessory. For accurate measurements, such as when measuring and displaying a person's weight, the load must be measured soon after the zero point is set.

[Reference] During the pre-shipment inspection, the balance sensors located at each corner are guaranteed to have drifting of no greater than 100 grams for an approximately 20-second period.

#### 4.4 Fluctuations During Measurements

When measuring someone's weight, that person must stand steadily on the Wii Balance Board. If the person being weighed continues to move, the measured value will fluctuate when the weight does not stabilize and the precision of the measurement will be off. One method to determine whether the measured data has fluctuated is to find the differences between the average value and both the minimum and maximum values for the data measured over a 2-second period. If these values fall outside the range of the values in Table 4-1, then the measurement is deemed to be *fluctuating* (*unstable*).

**Table 4-1 Determining Fluctuations** 

Weight	Value Range
0 kg-68 kg	±400 g
>68 kg-100 kg	±600 g
100 kg or more	±1 kg

#### 4.5 Recommended Measurement Procedure

To obtain accurate measurements, use the following procedure.

Use this procedure for every measurement.

- 1. Prompt the user to step off the Wii Balance Board accessory.
- 2. With no load on the accessory, set the zero point.
- 3. Immediately prompt the user to step onto the accessory and measure the load.
- 4. Correct the measured load value using the correction function.

## 5 Wii Balance Board Operations Check

Games that support the Wii Balance Board accessory must implement a check of Wii Balance Board operations, which allows the user to verify that the Wii Balance Board is working normally. Because the purpose of this mode is to allow the user to troubleshoot voluntarily, implement a check of Wii Balance Board operations as a separate mode from the game.

Within the check of Wii Balance Board operations, check whether it is possible to get measurement values from each of the four sensors of the Wii Balance Board accessory. The board fails the check if a measurement value cannot be gotten from even one sensor.

#### Wii Balance Board Operations Check Procedure

- 1. Use the WBCGetBatteryLevel function to check the battery level; if 0 is returned, prompt the user to replace the batteries.
- 2. Display "Please step off the Wii Balance Board." Have the user step off the balance board. To determine whether the user has stepped off the balance board, you can read the return value of the WBCRead function. However, depending on how the balance board was broken, the return value of the WBCRead function may not be correct. For this reason, we recommend requiring the user to press a button after they have stepped off the balance board, then checking the WBCRead function's return value. If WBCRead returns a value of 1 at this time, there is a possibility that the balance board is malfunctioning. In this case, treat it as a malfunctioning balance board.
- 3. After confirming the user has stepped off, set the zero point.
- 4. Display "Step onto the Wii Balance Board with your legs spread evenly." and then prompt the user to step on the Wii Balance Board within 10 seconds with his weight evenly distributed. Verify the user has stepped on the Wii Balance Board by confirming that the load has changed by at least 2 kilograms compared to the zero point.

If the user has not stepped on the Wii Balance Board within 10 seconds, display "Could not detect. Step off the Wii Balance Board and press the A Button." Once the A Button is pressed, the process starts again from when the zero point is set.

If the user cannot be detected on the third try, display a message stating the Wii Balance Board accessory is not operating correctly.

5. If the user has been detected, calculate the average load over 2 seconds, and ensure that the maximum load has not been exceeded. If the maximum load has not been exceeded, and the average load for each sensor is greater than or equal to 2 kilograms, the Wii Balance Board accessory is working correctly; otherwise, it is not. Display the result of the troubleshooting (for example, "OK" or "NG") to inform the user whether the Wii Balance Board is broken.

Figure 5-1 shows the Wii Balance Board Operations Check flow. User messages to be displayed on the screen are set off in square brackets inside the red boxes.

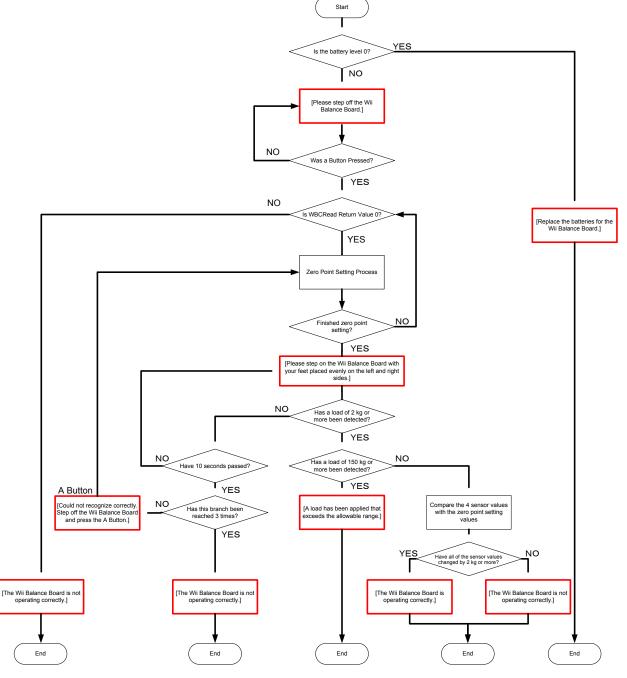


Figure 5-1 Recommended Wii Balance Board Operations Check Flow

To verify that the check of Wii Balance Board operations is implemented correctly, prompt a user to step on one of the four corners of the Wii Balance Board accessory, and then confirm whether the board fails the check. Repeat this check on all four corners.

# 6 Battery Level

#### 6.1 Battery Level

The balance sensors located at the four corners of the Wii Balance Board accessory stop operating when the battery level falls below a certain threshold. However, because the wireless module continues operating, the Wii Balance Board accessory continues to send data. If the battery level falls below the threshold value, all press values will go to zero, and that value will be sent continuously as a result.

Use the WBCGetBatteryLevel function to check the battery level; if zero is returned, prompt the user to replace the batteries.

#### 6.2 Message Display Conditions for Battery Replacement

When the battery strength is diminished, the battery level may flicker between 0 and 1 due to hardware characteristics. If the application shows a replace battery message when the battery level is 0 and closes the message when the battery level is 1 or greater, then this could cause the message to be displayed and closed whenever the battery level fluctuates by a small amount. If this seems to be unattractive from a game design viewpoint, try using a battery value of 110 or greater for the condition to close the battery replacement message.

All company and product names mentioned in this document are the registered trademarks or trademarks of their respective companies.

#### © 2008-2010 Nintendo

The contents of this document cannot be duplicated, copied, reprinted, transferred, distributed, or loaned in whole or in part without the prior approval of Nintendo.